



Maintaining your Sea-Dek deck

General upkeep of your deck is to wash with warm soapy water and a stiff brush.

If something is spilt on the deck it is best to soak the excess with a paper towel and wash with warm soapy water as soon as possible.

It can be pressure washed for a deep clean, we recommend this is completed once or twice a year to keep the deck looking fresh.

For stubborn marks or stains these can be sanded with a 40 grit sandpaper. Always sand with the grain and only sand by hand. It is only really necessary to gently scuff the surface to remove the mark or stain, so a relatively gentle sanding is all that should be required.

It is not recommended that any type of power sander is used on the deck.

T 08458 12 10 10 | **E** sales@sea-dek.co.uk | **W** www.sea-dek.co.uk

Unit 3 Oyster Business Centre, Woodrolfe Road, Tollesbury, Essex CM9 8SE

Sea-Dek Ltd Registered in England and Wales No. 06418905 | UK VAT No. 926 6081 16